



<b>On/Off Push Button and Indicator.</b> Before selecting a programme, press this button to switch on the dishwasher. The indicator switches on.	<b>START</b> After selecting the desired programme, press this button.	<b>End-of-cycle</b> End-of-cycle indicator. It switches on after the end-of-cycle acoustic signal stops.	<b>Regeneration salt</b> Add regeneration salt if this indicator is on.
---	---	---	--

	Programme Number & Symbol	Load Crockery and cutlery	Detergent dispenser: +) with pre-rinse -) without pre-rinse		Consumption ****		
			*** Small compartment	Large compartment	Normal load		
					Water (Liter)	Energy (kWh)	Time (Min.)
1	Pre-rinse	Crockery to be washed later.	-	-	4.6	0.01	9
2	Rapid 45° C	Lightly soiled crockery with no dried-on food.	-	+	12	0.95	55
3	Eco 55° C **)	Normally soiled crockery.	-	+	13.0	1.09	84
4	Normal 65° C *)	Normally soiled crockery, with dried-on food.	-	+	16.5	1.27	88
5	Intensive 65° C	Heavily soiled crockery with dried-on food.	+	+	20.5	1.37	95

\*\*\*) For pre-rinse.

\*\*\*\*) These values are approximate, and refer to normal operating conditions. Values may vary in relation to usage, e.g.: different loads, water temperatures, water hardness and power supply voltage.

#### Daily check list:

1. Turn on the tap.
2. Arrange crockery so that items do not touch each other.
3. Make sure the water jet can reach all loaded items and that the spray arms turn freely.
4. Fill the detergent dispenser and check the salt and rinse aid levels.
5. Close the door tight.

#### Tips:

##### Crockery:

- Load crockery upside down on the racks.

##### Cutlery:

- The cutlery basket can be removed to increase available space.
- Place the cutlery unsorted in the cutlery basket with the handles positioned downwards.
- To avoid the risk of injury on sharp knives and forks, cutlery can also be placed in the basket with the handles positioned upwards.

##### Cups:

- Load cups at an angle to facilitate water circulation.

##### Silver cutlery:

- Always hand wash silver cutlery immediately after use. Follow the detergent manufacturer's directions on the detergent pack.





#### Important:

- Fill the machine with machine-washable crockery and kitchen utensils only.
- Certain wooden and aluminium articles may discolour.
- Glued, plastic utensils may be heat sensitive.
- Tin may become dull.
- Decorated crockery (unglazed) may fade.
- Glasses may become dull.

\*) Reference programme for type A detergents (CEI 436).

\*\*) Reference programme for type B detergents (EN 50242).

## DISHWASHER USER INSTRUCTIONS

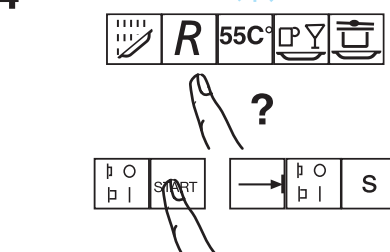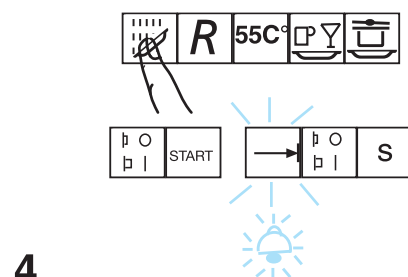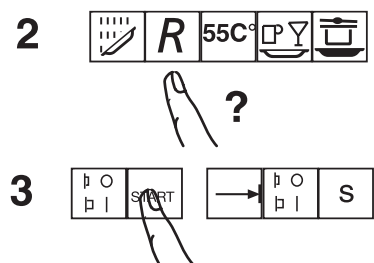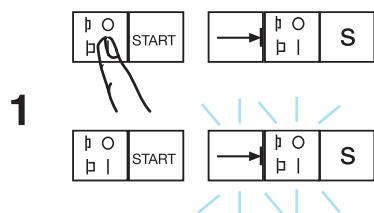

**Open the dishwasher door and turn on the water tap.**


- Before selecting a programme, make sure that the **On/Off push button** is in the **On** position (both the end-of-cycle and the On indicators are on).
- Select the desired programme by pressing the corresponding button.
- Press the **Start** button and keep it down for a few seconds after the **end-of-cycle indicator** has switched off. Then **close the door** to start the programme.
- To change the current programme, **open the door**, press the **Pre-rinse** button and **close the door** again. **Open the door** again; wait for the **acoustic signal** and make sure the **end-of-cycle indicator** is on; press the button corresponding to the new programme, press the **Start** button and **close the door** again to start the dishwasher.

**Note:** If you open the door during the wash cycle, you must wait at least 1 min. with the door ajar before starting the dishwasher again. If the dishwasher is stopped during the wash cycle, when started again it resumes the wash cycle from where it was interrupted.

- To switch the dishwasher off, open the door and press the **On/Off button** (the indicator switches off).



**Unload first the lower rack and then the upper one.**

## Upper rack

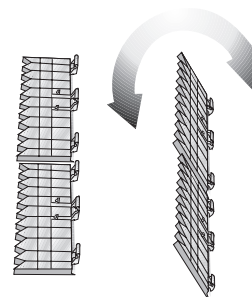


**Height adjustment must only be carried out with the basket empty:**


- Release the caps of the rack rails.
- Remove the basket and replace it as required, using the pair of top or bottom wheels.
- Close the caps.

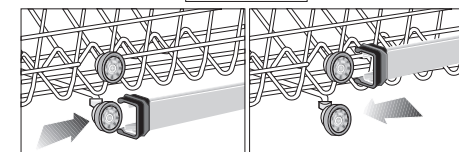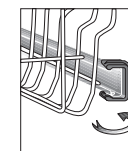**Crockery Holders:**

- Lowered: two layers of cups.
- Raised: long-stemmed glasses.

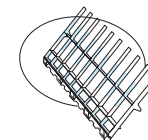

## Lower rack

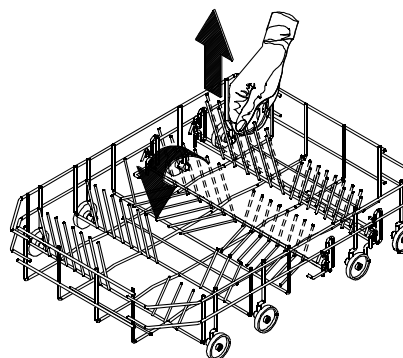**Plate Holder:**

- Lowered: pots and pans.
- Raised: plates.

**Cutlery Basket:**

- Removable to gain space.

